

# Installation Guide

## SSU Trib Expander

TIMELINE VISTA, INC.  
1755 LA COSTA MEADOWS DRIVE, SUITE B  
SAN MARCOS, CA 92069  
TEL. 760-727-3300  
(FAX 760-727-3620)  
SUPPORT@DIGAUDIO.COM

**DATE:** 9/4/92  
**MODEL:** Lynx System Supervisor (SSU)  
**REVISION:** N/A  
**SERIAL NO:** N/A  
**SOFTWARE:** N/A

### REQUIRED TOOLS:

Static safe workstation	IC Extractor/Insertor or
Grounding wrist strap	small slotted screwdriver
Phillips screwdriver	

### REQUIRED PARTS:

P/N 70C016, Trib Expander Kit

### PROCEDURE:

1. Turn off the System Unit and disconnect all cables from the rear panel. Place the SSU on a static safe workstation. Ground yourself and the workstation anti-static mat.
2. Remove the eight phillips screws securing the top cover. Turn the SSU so that the front panel faces you. See Figure 1.
3. Locate U35, the trib port processor socket on the motherboard. Remove the processor, if fitted.



Figure 1. Remove the Top Cover

## Procedure Continued

4. Insert the Trib Expander in position U35, carefully aligning all of the pins. See Figure 2 for correct placement.

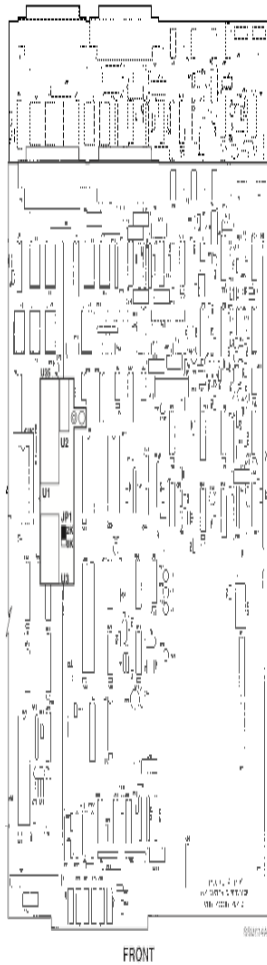


Figure 2. Expander Placement

5. Insert a screw into one of the holes on the mounting plate and place the nylon washer on the screw (Figure 3). Loosely attach the mounting plate to the motherboard standoff. Insert the second screw in to the Trib Expander PCB, and tighten both screws.
6. Replace the top cover.



Figure 3. Screw and Washer Configuration